

Laser Labs, Inc.

## Certificate of Accuracy Window Tint Meter Reference Samples

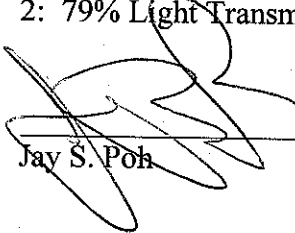
This document certifies that the two enclosed serialized Reference Samples have been tested with a calibrated spectrophotometer at five hundred and fifty nanometers wavelength. Those test results have been stated as the light transmission values on the respective Reference Samples.

Date of Certification: 4/14/05

Serial Number: 205100001484

Stated Values 1: 26 % Light Transmission  
2: 79% Light Transmission

Certified by:

  
Jay S. Poh

Window Tint Meter Reference Samples are used to verify the accuracy of a Tint Meter. Follow the instructions to perform this test.

1. Each Reference Sample has a label affixed to it. On the label is a light transmission percentage. This percentage is referred to as the stated value of that reference sample.
2. Read the stated value.
3. Follow the test procedure for your Tint Meter and measure the light transmission of the Reference Sample.
4. The reading on the Tint Meter should not exceed three percentage points of the stated value to be within the specified accuracy ratings of a two piece Tint Meter, and should not exceed two percentage points of a one piece Tint Meter. Example: If the stated value is 25 and the meter reading was any where in between 22 to 28, then the Tint Meter has verified that it is accurate to within the specification.
5. Test your Tint Meter with each Reference Sample before any window test.
6. Keep your Reference sample protected in the Tint Meter carrying case.
7. To clean, rub with a soft 100% cotton cloth. Do not use any liquid or dry cleaners.
8. To replace, contact Laser Labs, Inc at Laser-Labs.Com or call 1-800-452-2344, for outside U.S. 508-923-6416.